


COOKTOP PARTS

For Models: WFE510S0AW0, WFE510S0AB0, WFE510S0AS0, WFE510S0AT0, WFE510S0AD0
 (White) (Black) (Stainless) (Biscuit) (Universal Silver)

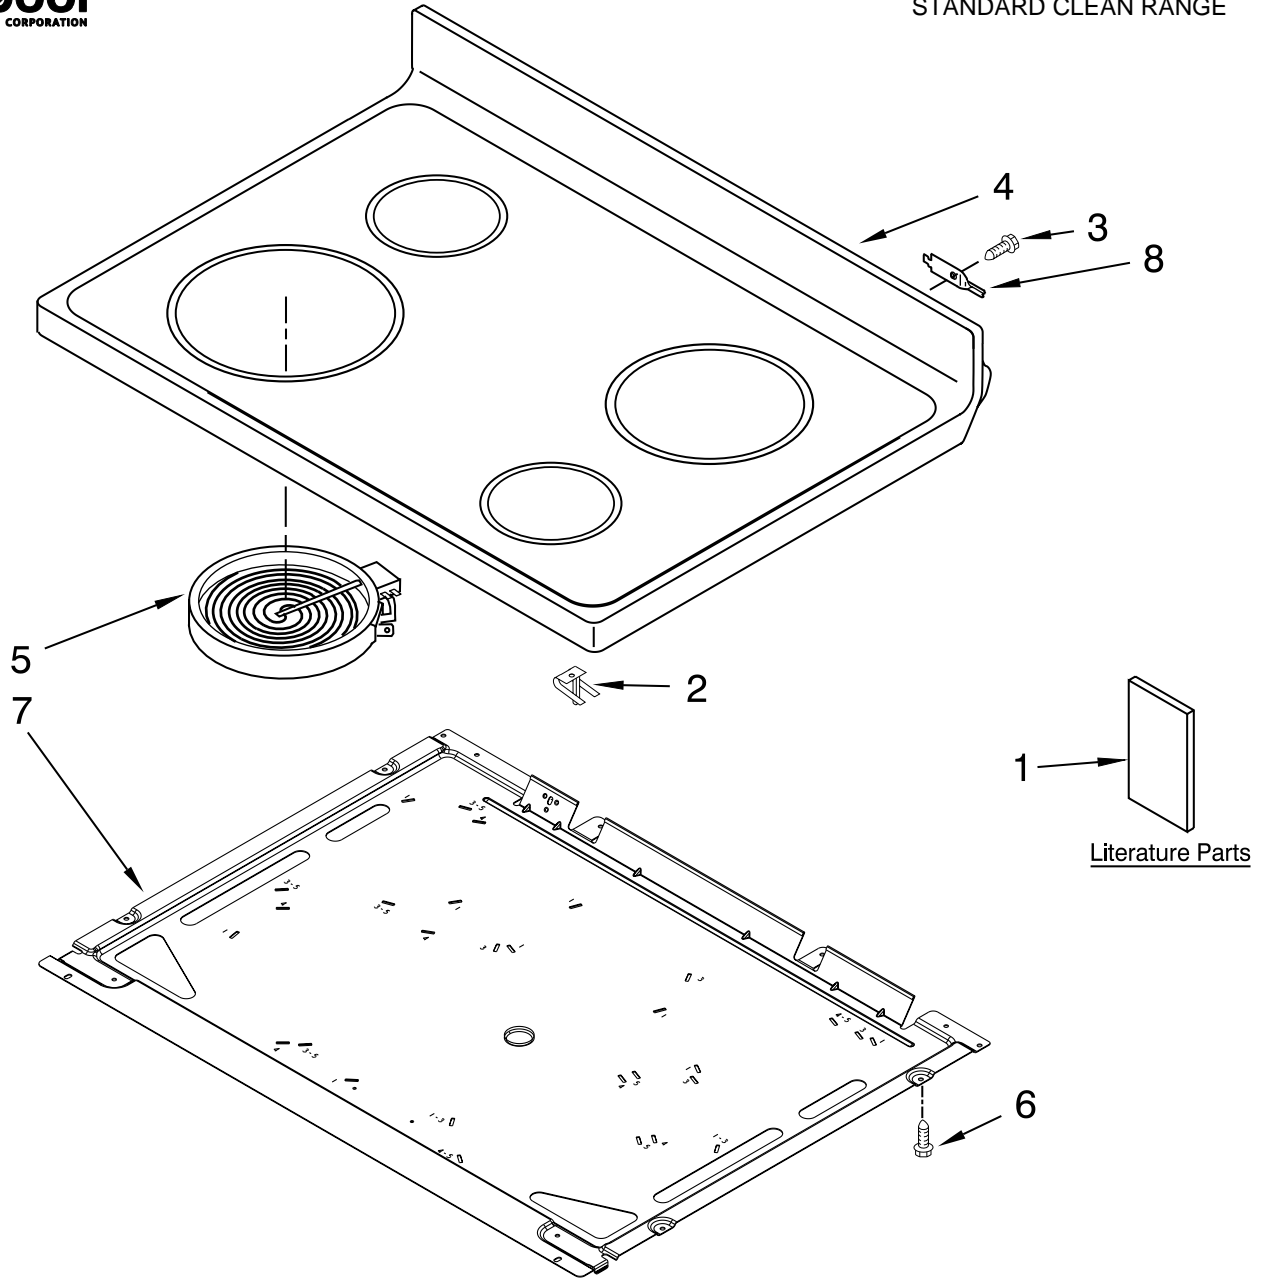

30" ELECTRIC FREESTANDING
 STANDARD CLEAN RANGE



Illus. No.	Part No.	DESCRIPTION
1	W10403811	Literature Instructions Installations
	W10394383	Owners Manual
	W10432689	Tech Sheet
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2	W10225448	Spring, Locator
3	3196178	Screw
4	W10380656	White
	W10380657	Black
	W10411864	Biscuit

Illus. No.	Part No.	DESCRIPTION
5	W10275048	Element, Surface 3000/1400W - LF
	8273994	1200W - LR/RR
	8273992	2500W - RF
6	3196169	Screw
7	W10106409	Pan, Radiant
8	3195060	Hinge, Cooktop

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: WFE510S0AW0, WFE510S0AB0, WFE510S0AS0, WFE510S0AT0, WFE510S0AD0
 (White) (Black) (Stainless) (Biscuit) (Universal Silver)

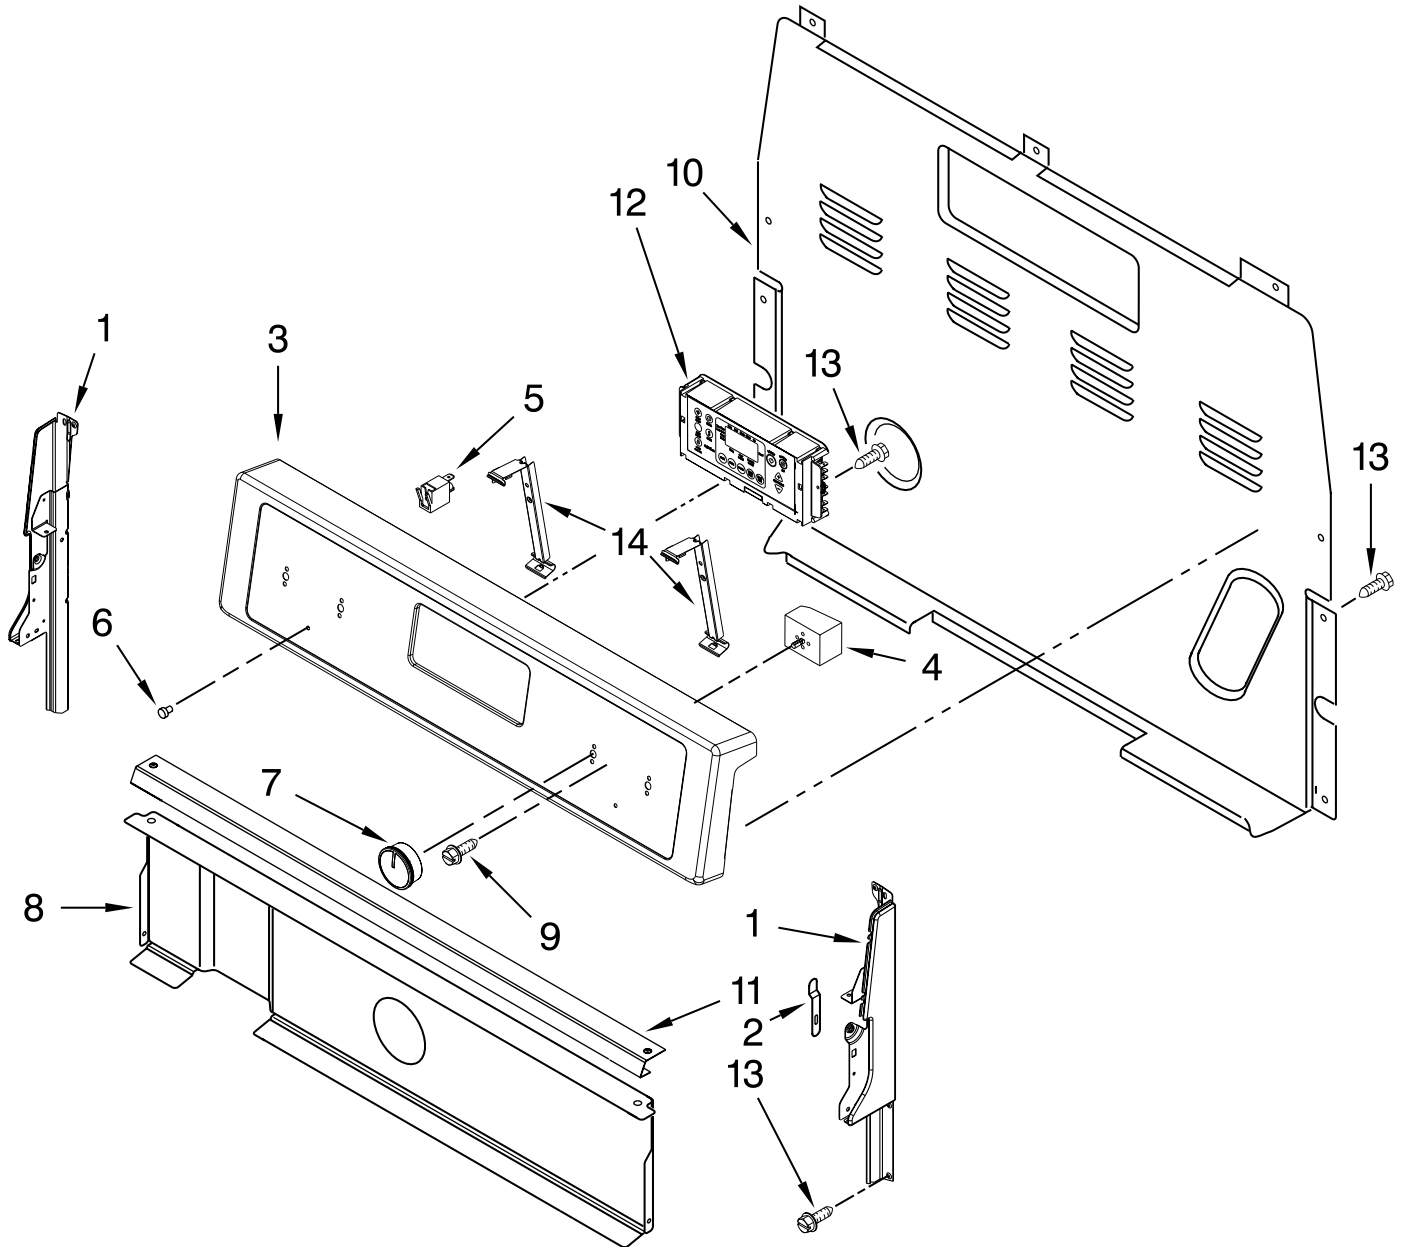

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10184433	White LH
	W10184434	White RH
	W10184437	Black LH
	W10184438	Black RH
	W10184435	Biscuit LH
	W10184436	Biscuit RH
2	3196200	Clip, Spring
3		Panel, Backguard
	W10370091	White
	W10333940	Black
	W10339376	Stainless
	W10370096	Universal Silver
	W10370182	Biscuit


Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	W10434452	Left Front
	3148951	Left & Right Rear
	3148954	Right Front
5	8523265	Light, Indicator
6	3196068	Lens, Light
7		Knob
	W10339426	White
	W10339425	Black
	W10339428	Biscuit
8	W10134247	Shield, Heat

Illus. No.	Part No.	DESCRIPTION
9	3400882	Screw
10	8272473	Cover, Upper
11	W10182322	Brkt-Mntg, Console
12		Control, Range
		(LCC95)
	W10348623	White
	W10348622	Black
	W10424886	Stainless
	W10413076	Biscuit
13	3196178	Screw
14	W10324410	Brkt-Mntg, EOC

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS


For Models: WFE510S0AW0, WFE510S0AB0, WFE510S0AS0, WFE510S0AT0, WFE510S0AD0
 (White) (Black) (Stainless) (Biscuit) (Universal Silver)

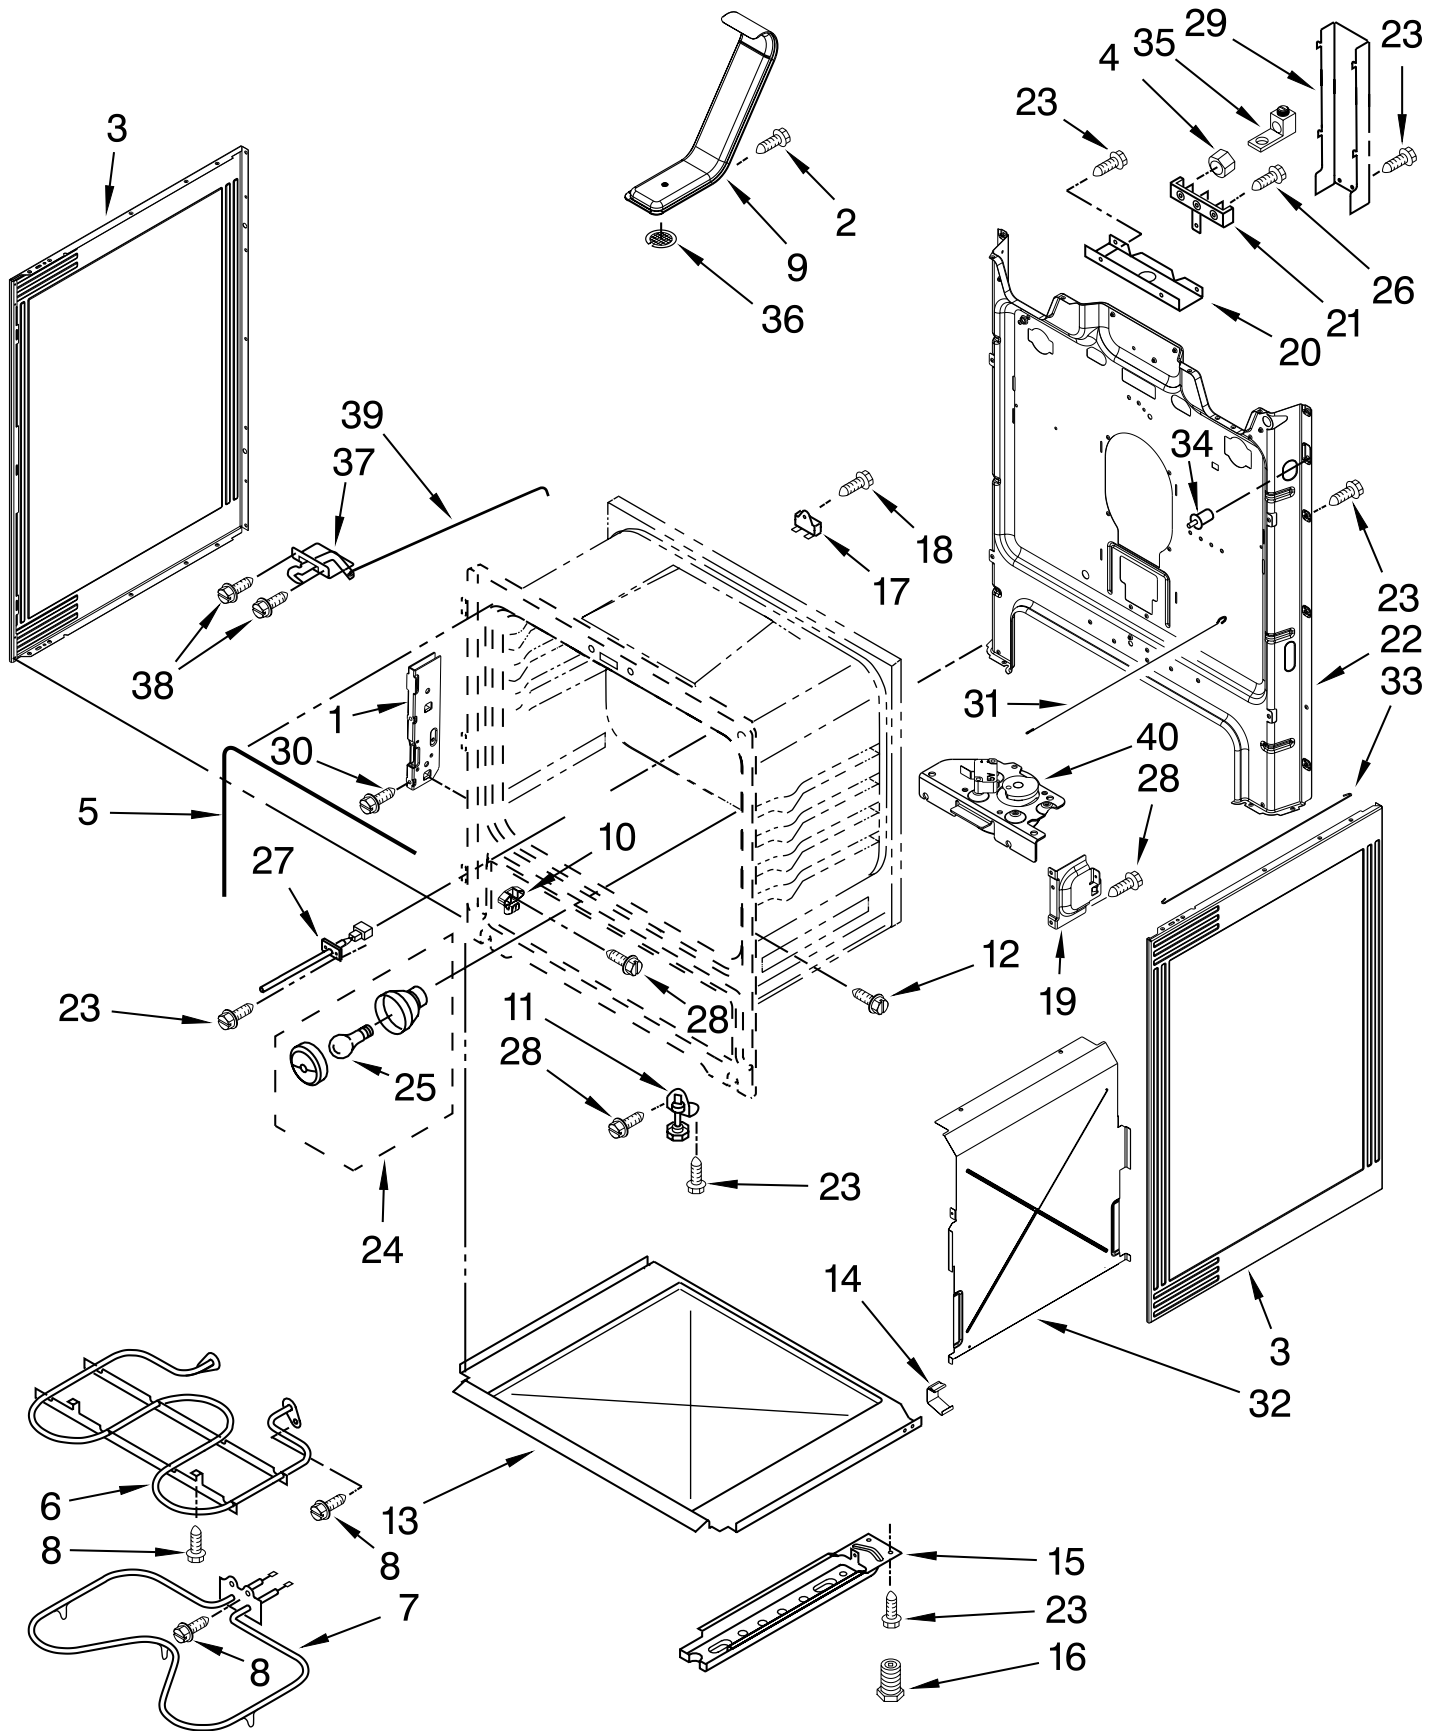

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: WFE510S0AW0, WFE510S0AB0, WFE510S0AS0, WFE510S0AT0, WFE510S0AD0
 (White) (Black) (Stainless) (Biscuit) (Universal Silver)

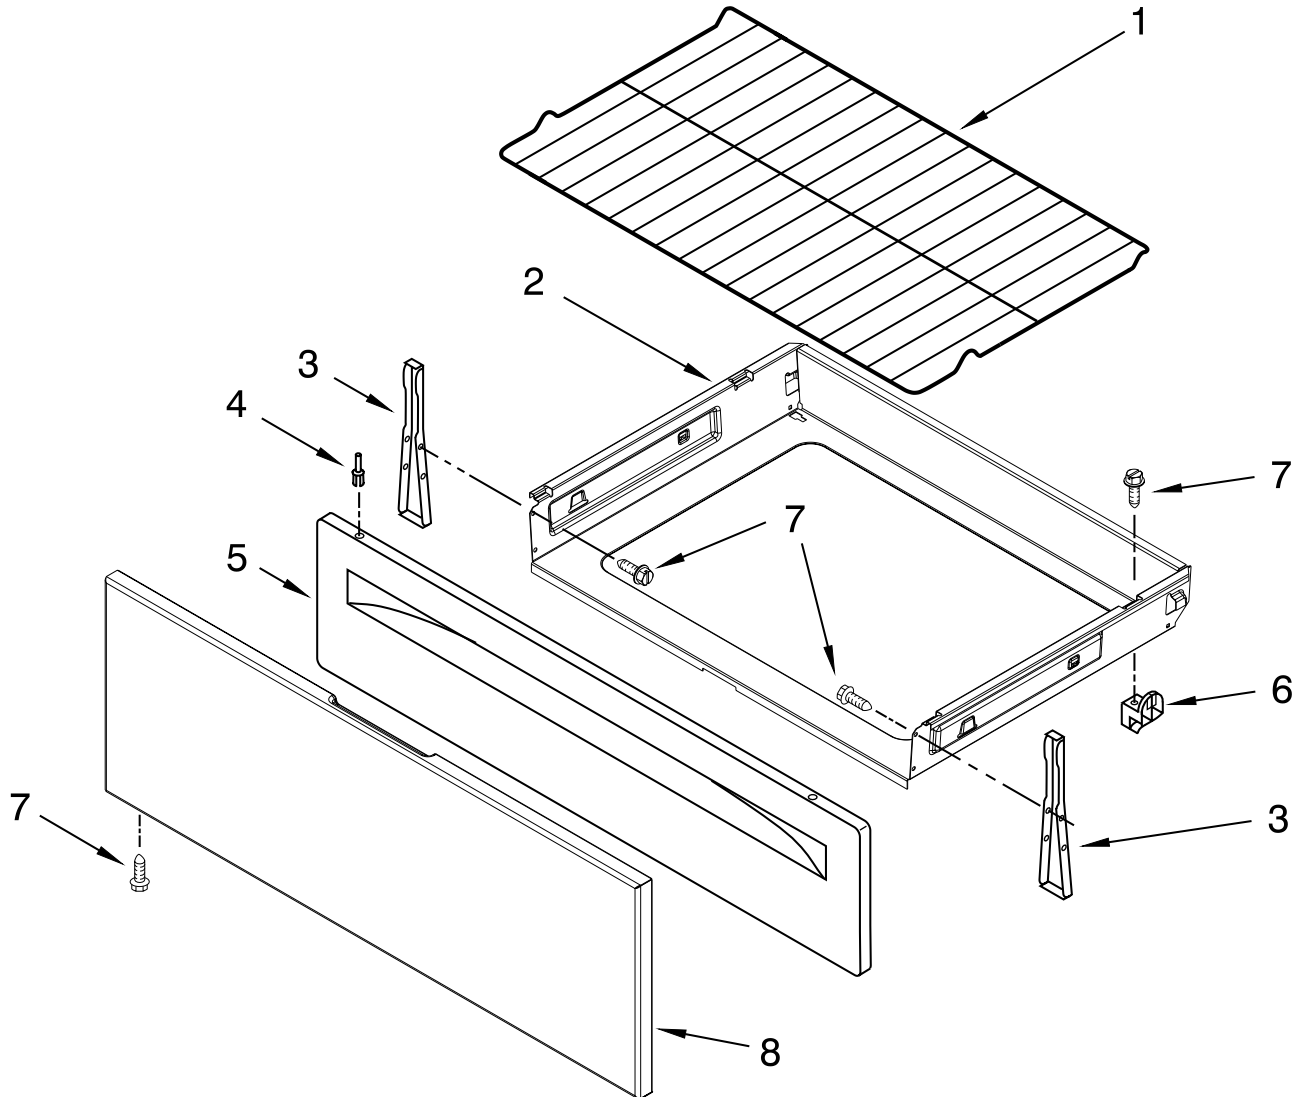


Illus. No.	Part No.	DESCRIPTION
1	W10268578	Rack, Oven
2	W10300032	Drawer, Storage
3		Bracket, Drawer
	W10462912	Wht & Blk Models
	W10462910	Stainless Model
4		Rivet, Push
	3196814	White
	3196813	Black
5		Panel, Drawer Frnt
	8053339	White
	8053341	Black
	8272501	Biscuit
	9761694	Universal Silver
6	W10317899	Glide, Drawer
7	3196165	Screw
8	W10330070	Panel (Stls. Mdl)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: WFE510S0AW0, WFE510S0AB0, WFE510S0AS0, WFE510S0AT0, WFE510S0AD0
 (White) (Black) (Stainless) (Biscuit) (Universal Silver)

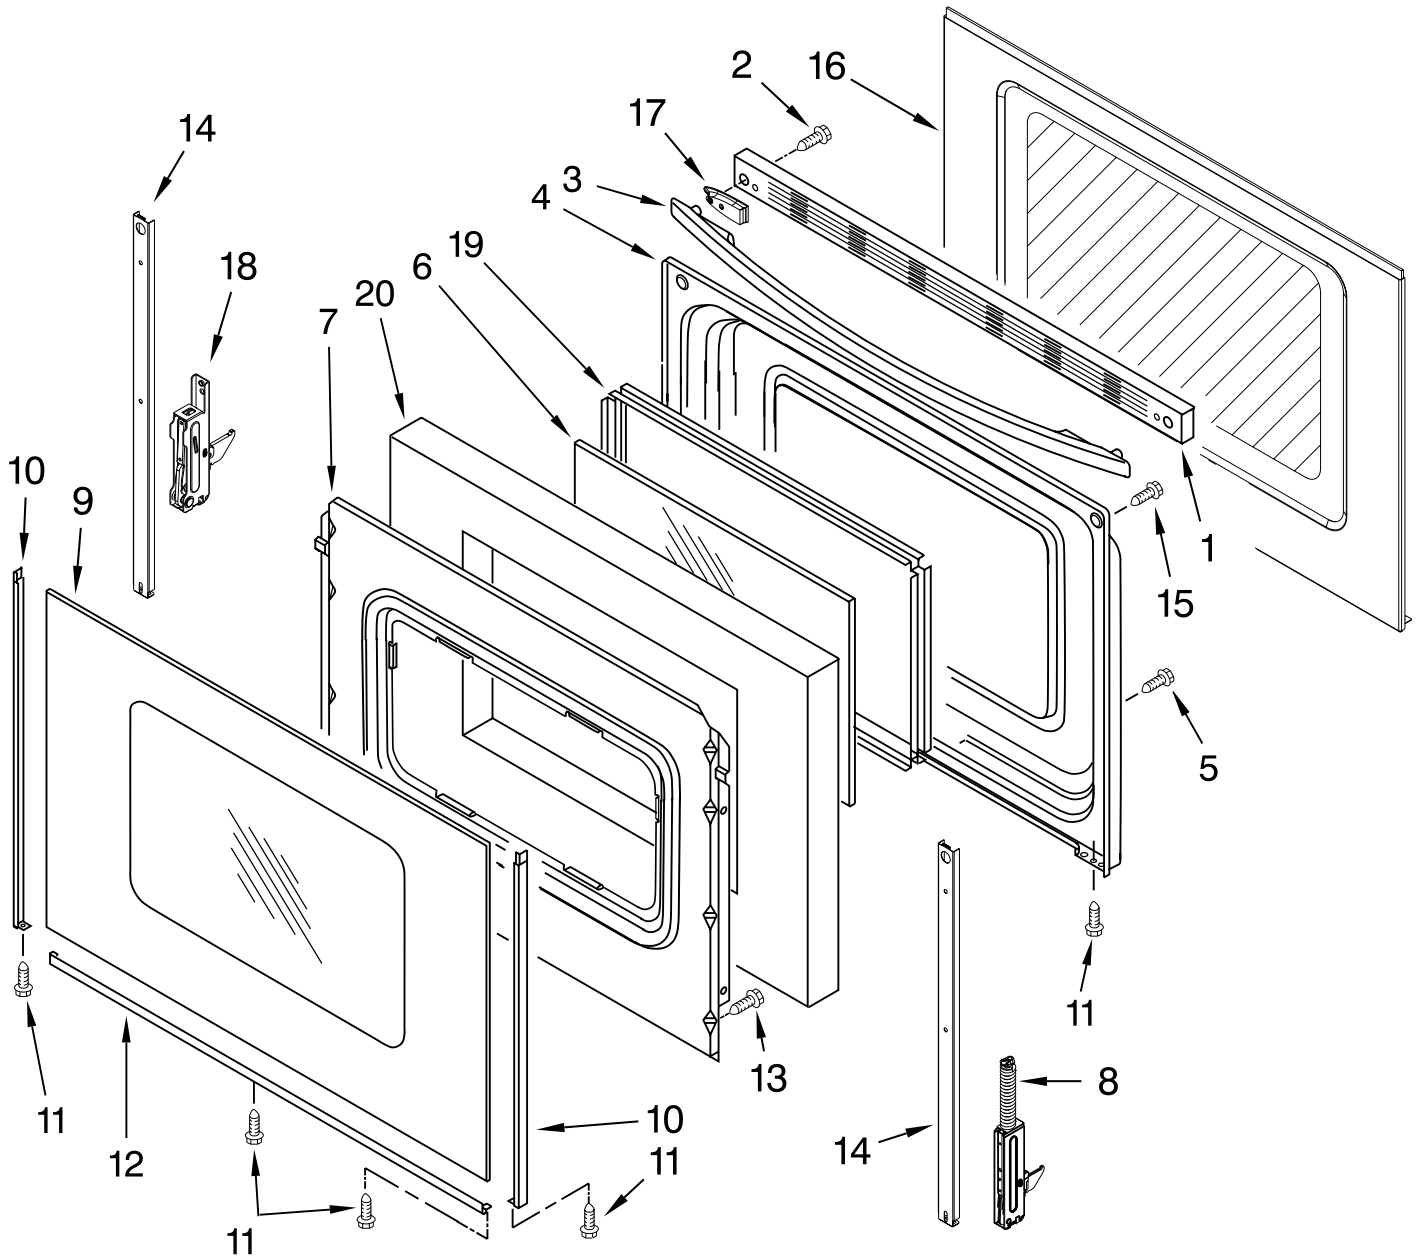

Illus. No.	Part No.	DESCRIPTION
1	W10310920	Trim, Top
	W10310922	White
	W10310923	Black
	W10310923	Biscuit
2	W10465148	Screw
3	W10300489	Handle, Door
	W10300490	White
	W10300490	Black
	W10254687	Stainless
	W10300491	Biscuit
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Window, Inner
7	9761357	Retainer, Insul.

Illus. No.	Part No.	DESCRIPTION
8	W10299224	Hinge
	W10299224	Active
9	W10409945	Glass, Outer
	W10409945	White
	W10409946	Black
	W10409947	Biscuit
10	8523172	Trim, Side
	8523172	White LH
	8523166	White RH
	8523171	Black LH
	8523165	Black RH
	8523173	Biscuit LH
	8523167	Biscuit RH
11	3196160	Screw

Illus. No.	Part No.	DESCRIPTION
12	8523175	Trim, Lower
	8523175	White
	8523177	Black
	W10067550	Universal Silver
	8523178	Biscuit
13	W10031780	Screw
14	W10113759	Strap, Door
15	W10200660	Screw
16	W10330077	Door, Outer
	W10330077	(Stainless Only)
17	W10410341	Standoff, Handle
	W10410341	(Stainless Only)
18	W10299227	Hinge, Passive
19	W10316950	Frame, Glass
20	W10278991	Insulation, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: WFE510S0AW0, WFE510S0AB0, WFE510S0AS0, WFE510S0AT0, WFE510S0AD0
 (White) (Black) (Stainless) (Biscuit) (Universal Silver)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

REFINISHING MATERIAL

242756 Touch-Up Self-Clean(1/2 Pt)

INSULATION

261514 Insulation, Fiberglass (1-1/2" x 24" x 120")
 240132 Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017 White
 511873 White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930 White
 285006 Superior Black
 206922 Primer (White)

PAINT, BULK (1 qt.)

799344 White (Uncut)

ACCESSORY PARTS

241430 Foil, Aluminum Oven (18" x 25')
 3191048 Cleaner, Glass
 4396923 Pan, Broiler
 31605 Kit, Cooktop Care
 31463A Protectant, Cooktop
 W10355049 Wipes, Cleaning (Stainless Steel)
 W10355016 Cleaner, Stainless Steel
 W10355051 Cleaner, Cooktop
 W10355010 Cleaner, Kitchen/Appliance
 WA906B Scraper, Cooktop
 W10275756 Cleaner & Polish (Granite)
 31617A Cleaner (Gas Grate & Drip Pan)
 4396096RB Griddle, Gourmet
 W10268578 Rack, Oven (Standard Flat)
 4396923 Broiler Pan & Grid (Porcelain)
 W10123240 Broiler Pan & Roasting Rack

ANTI-TIP KIT

W10306542 Anti-Tip Kit
 7101P485-60 Screw, Anti-Tip

WIRING HARNESS PARTS

W10349708 Harness, Wire (Cooktop Left)
 W10261085 Harness, Wire (Cooktop Right)
 W10084660 Harness, Wire (Sensor/Dr Switch)
 3196154 Screw
 W10349709 Harness, Wire (Main)
 3196173 Screw
 3196174 Screw (Grnd Wire / Back)